

FIG. 2

3/17

121

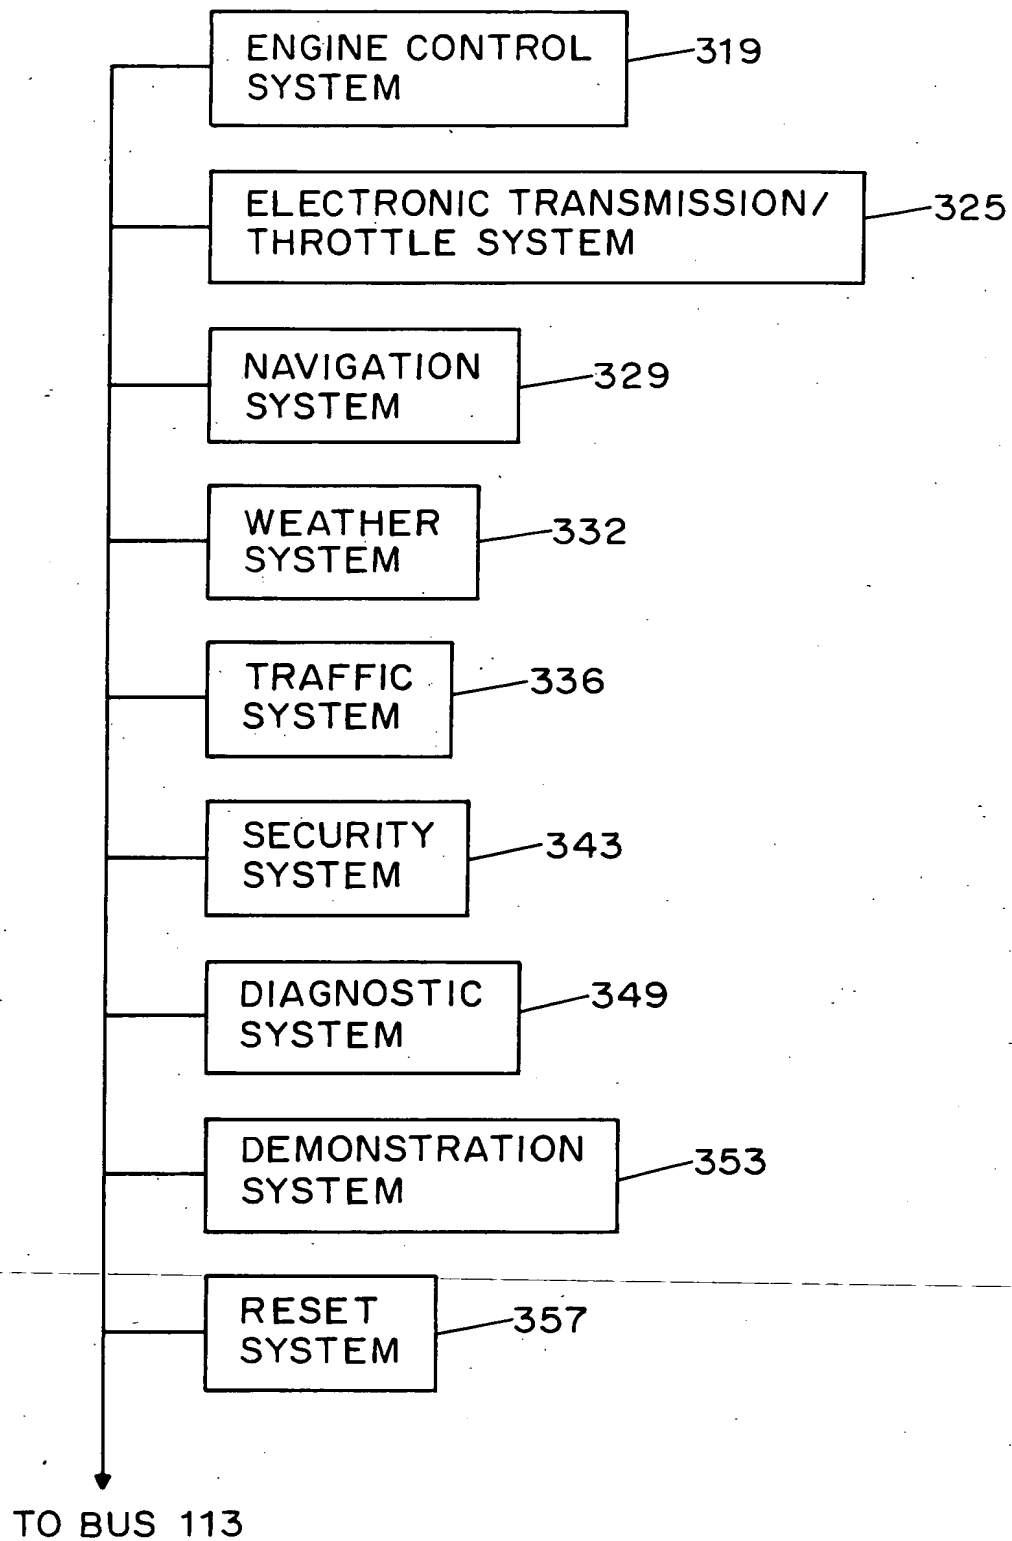


FIG. 3

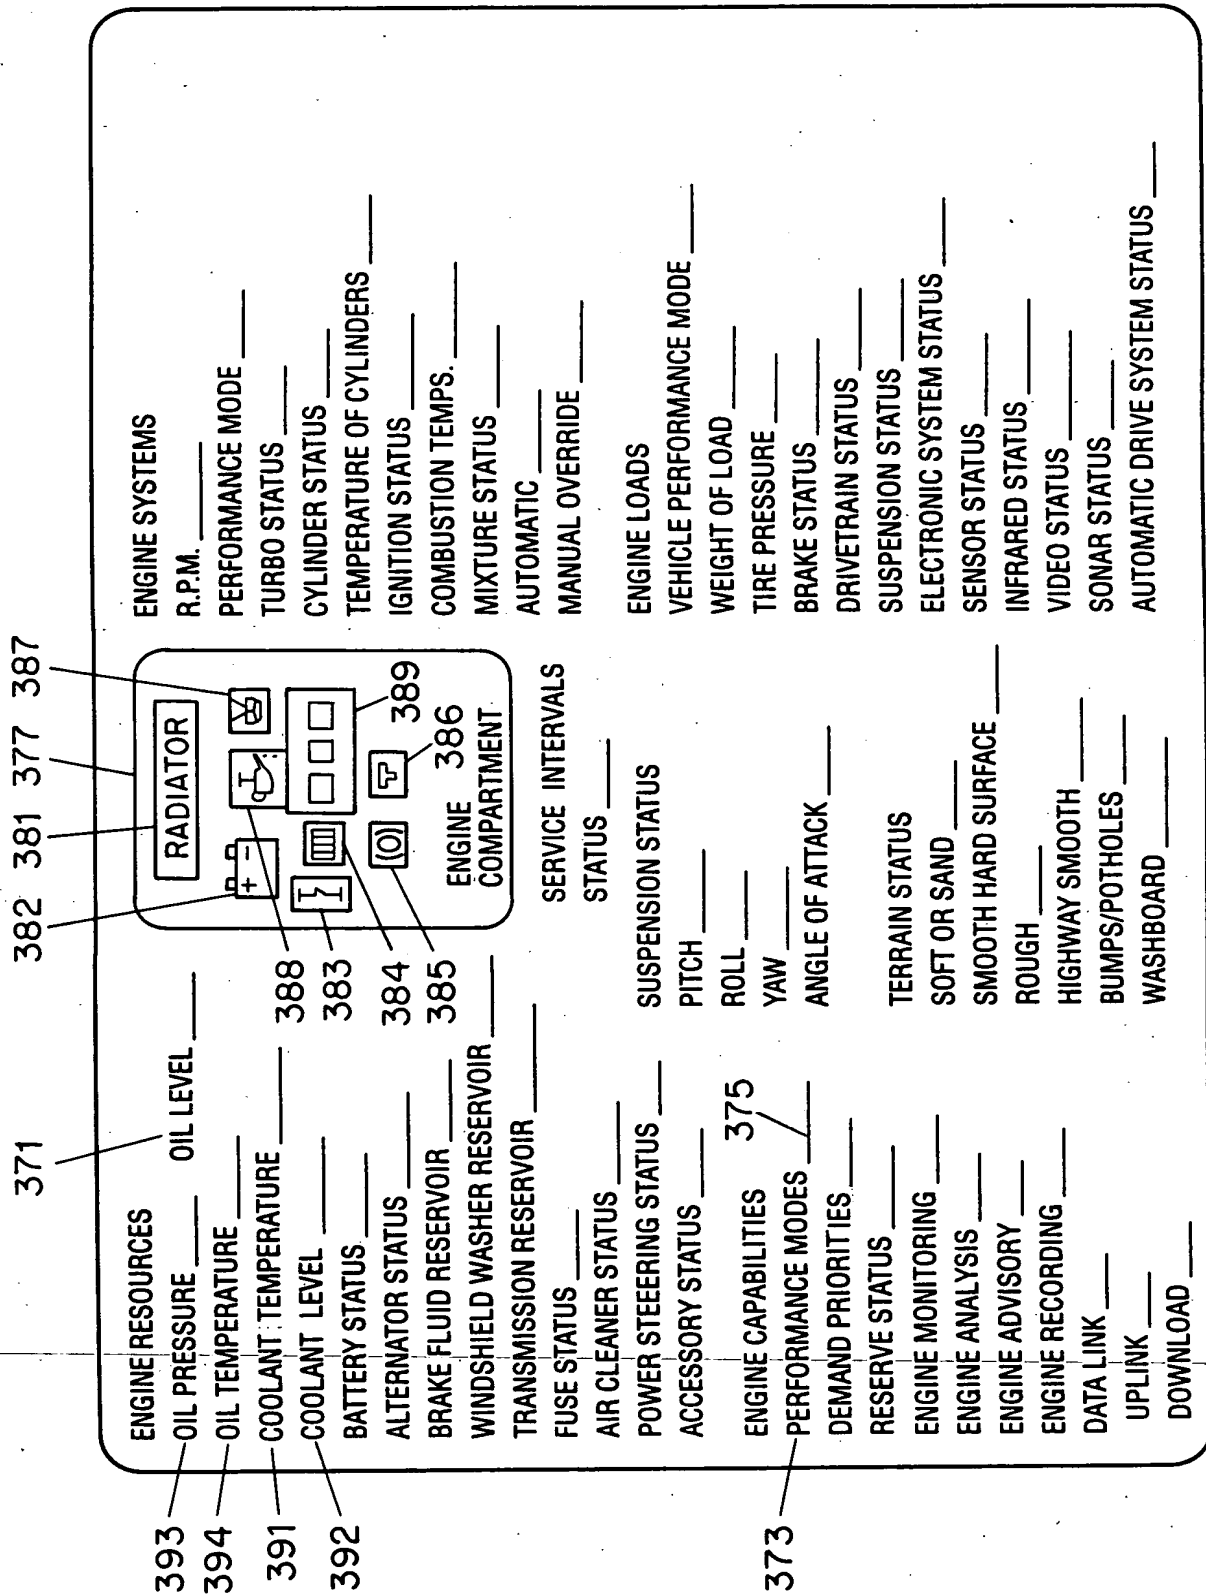


FIG. 4

5/17

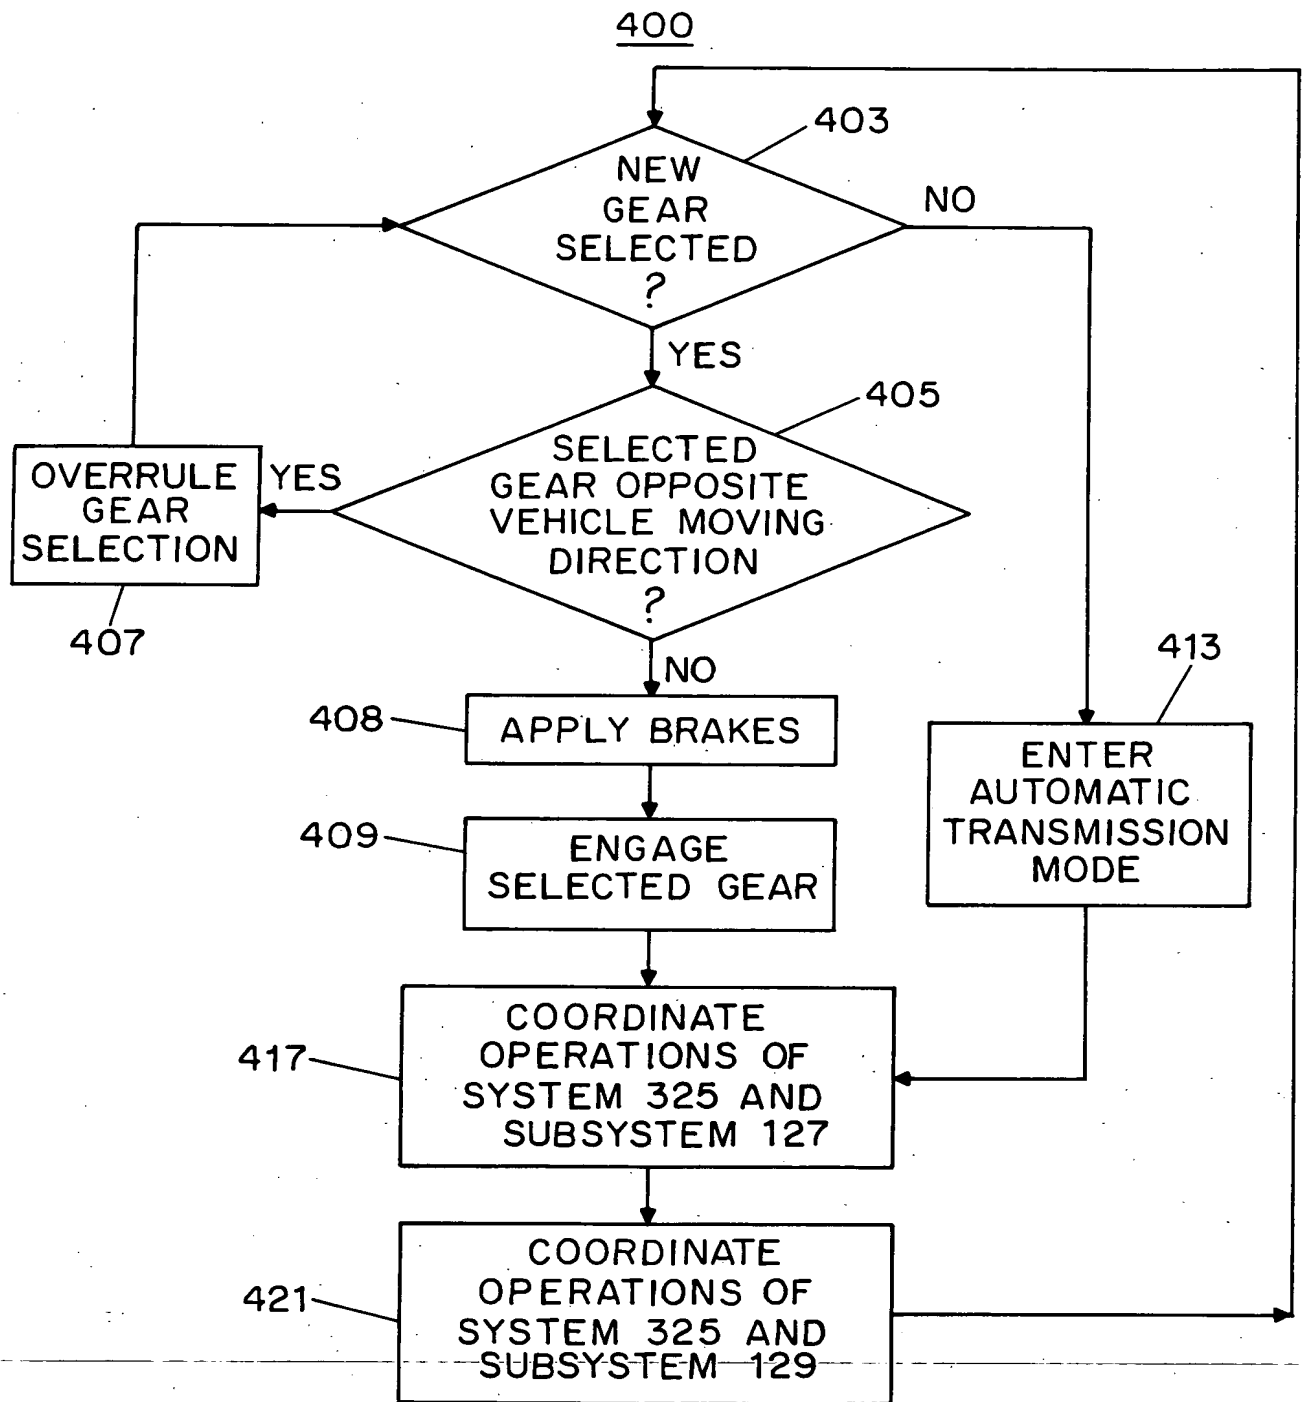


FIG. 5

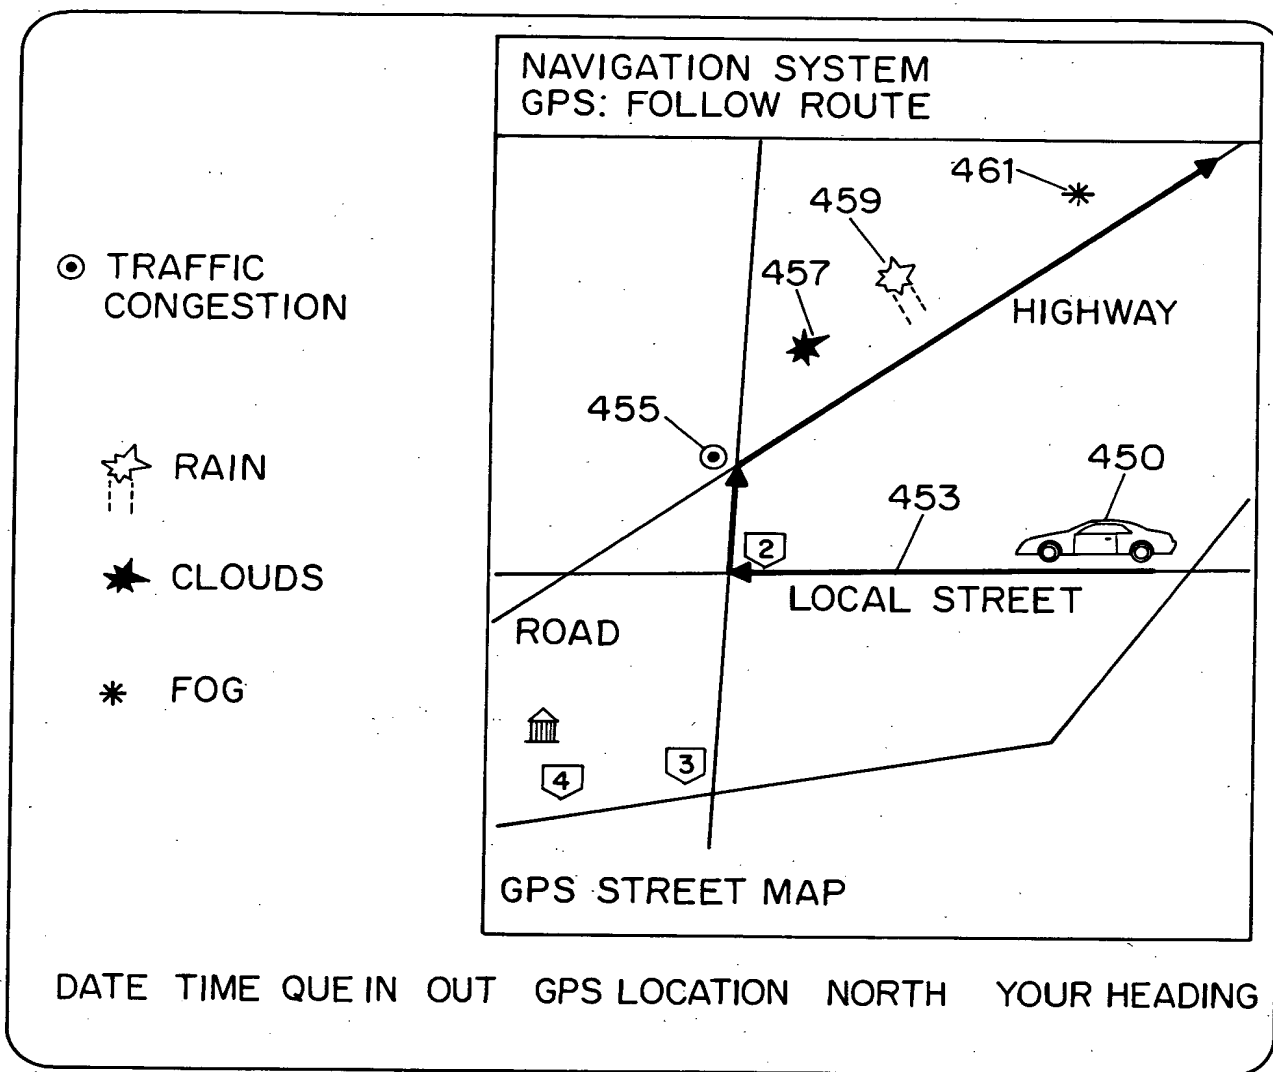


FIG. 6

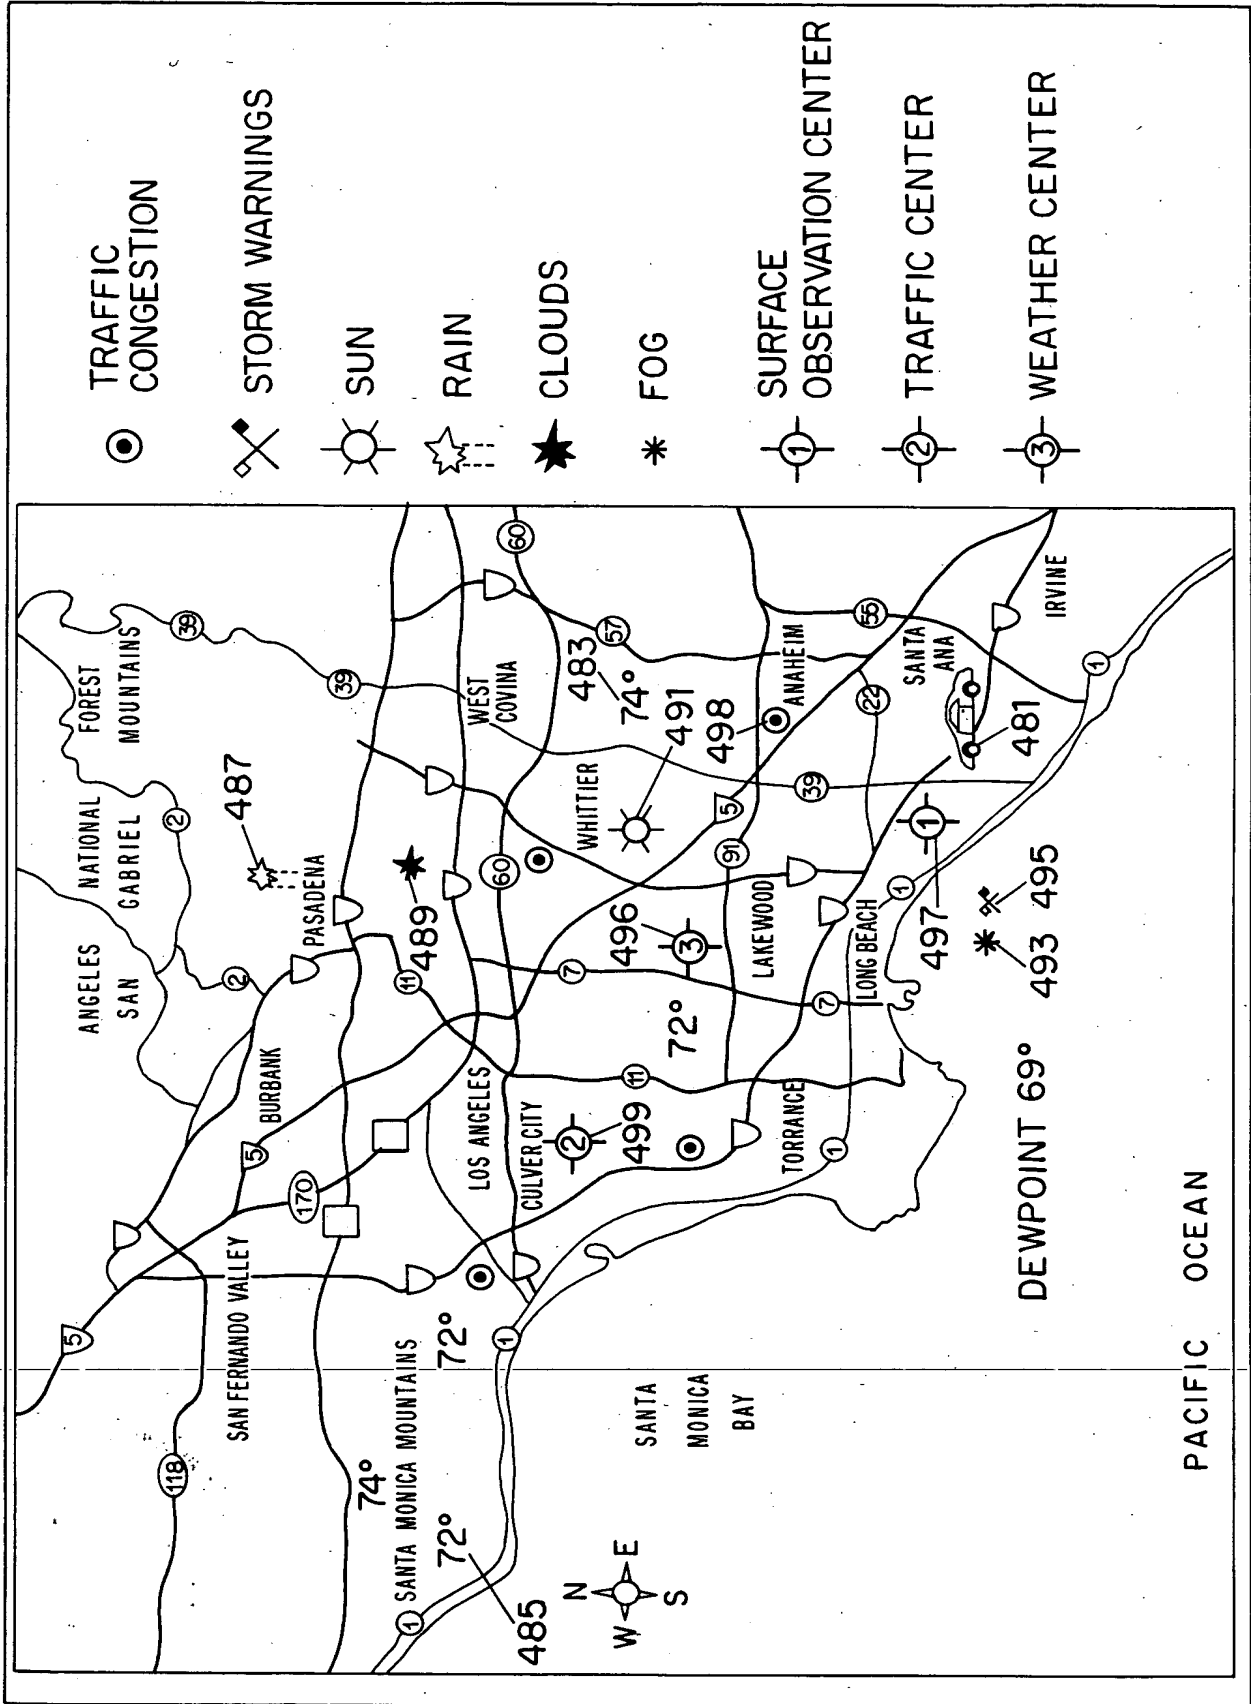


FIG. 7

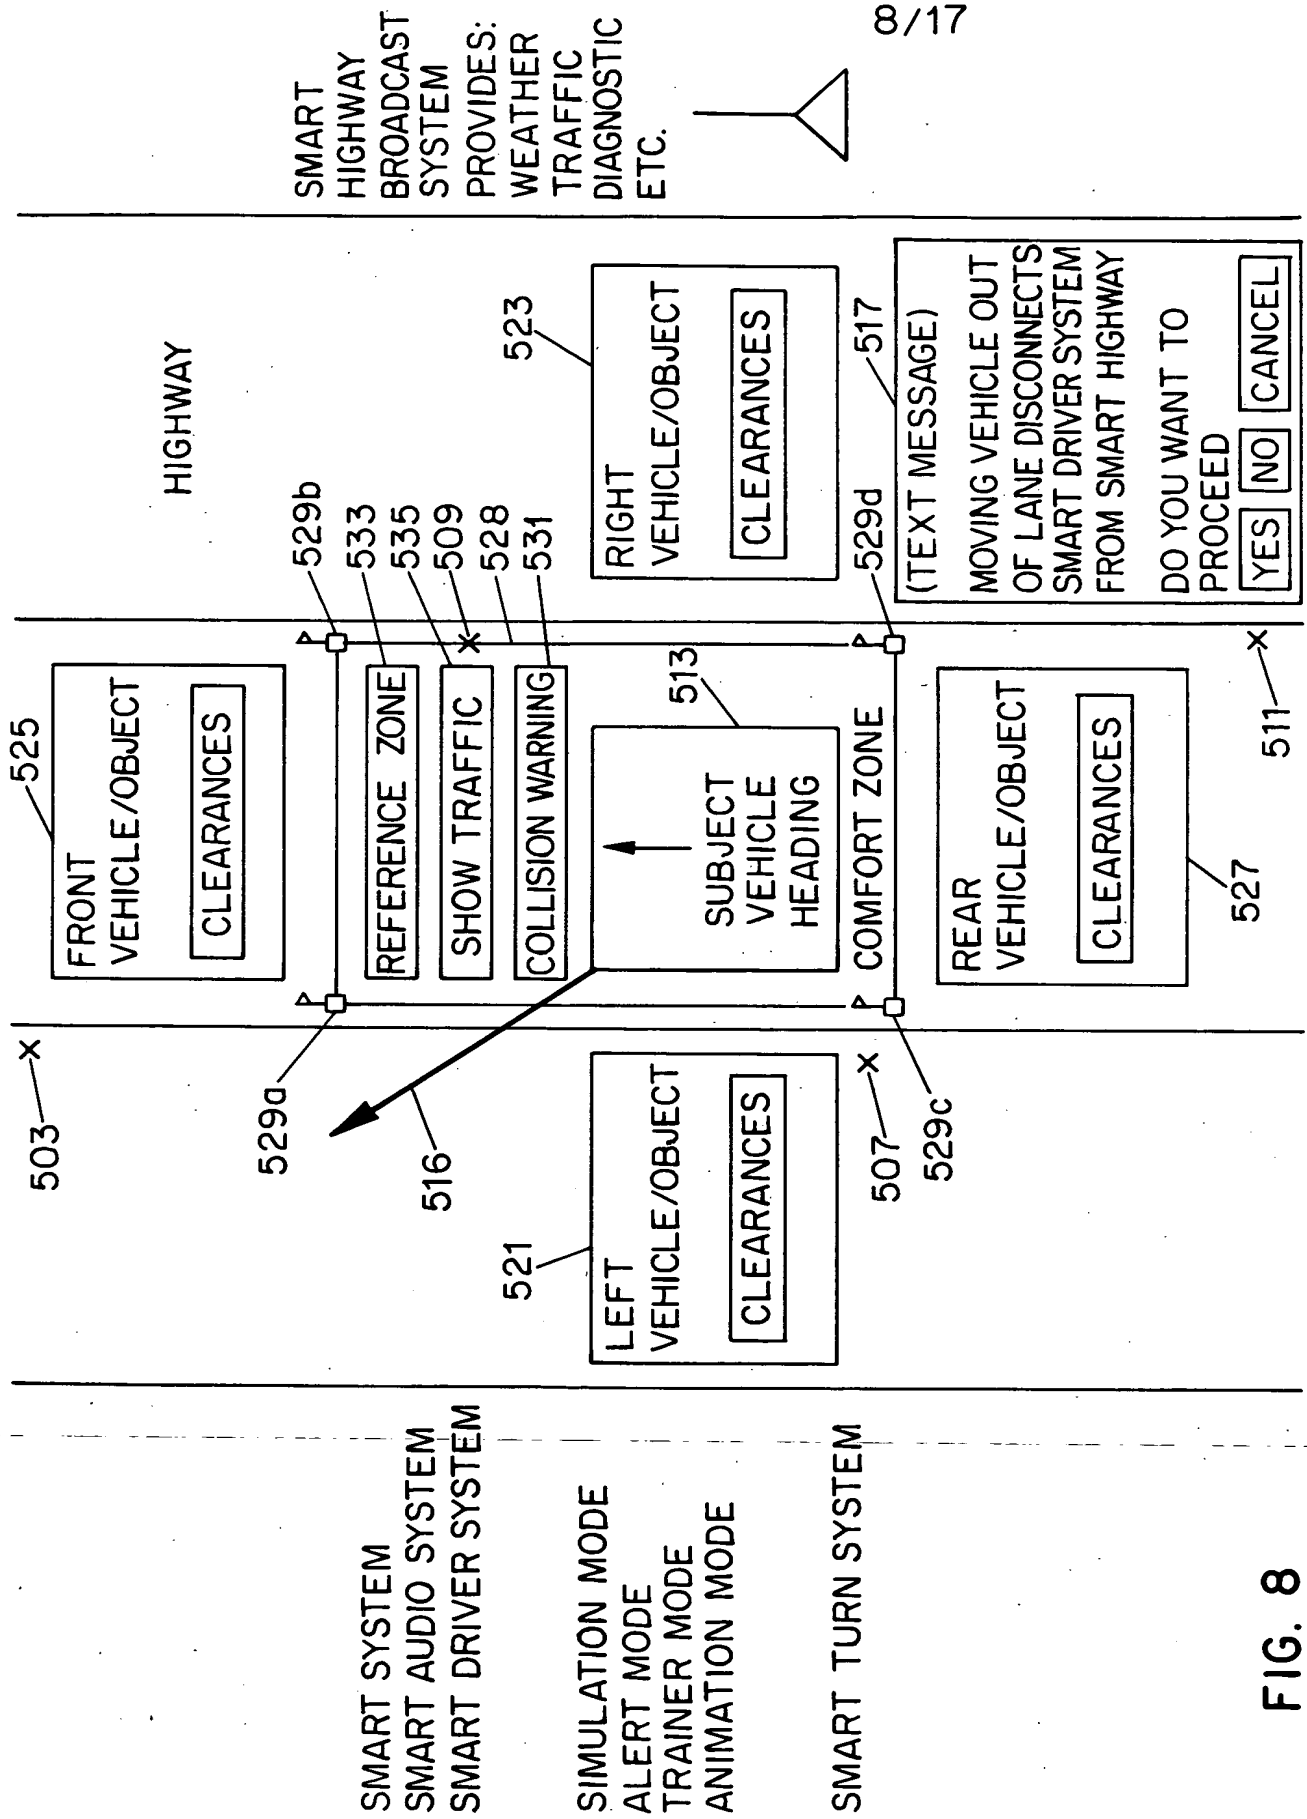


FIG. 8

9/17

500

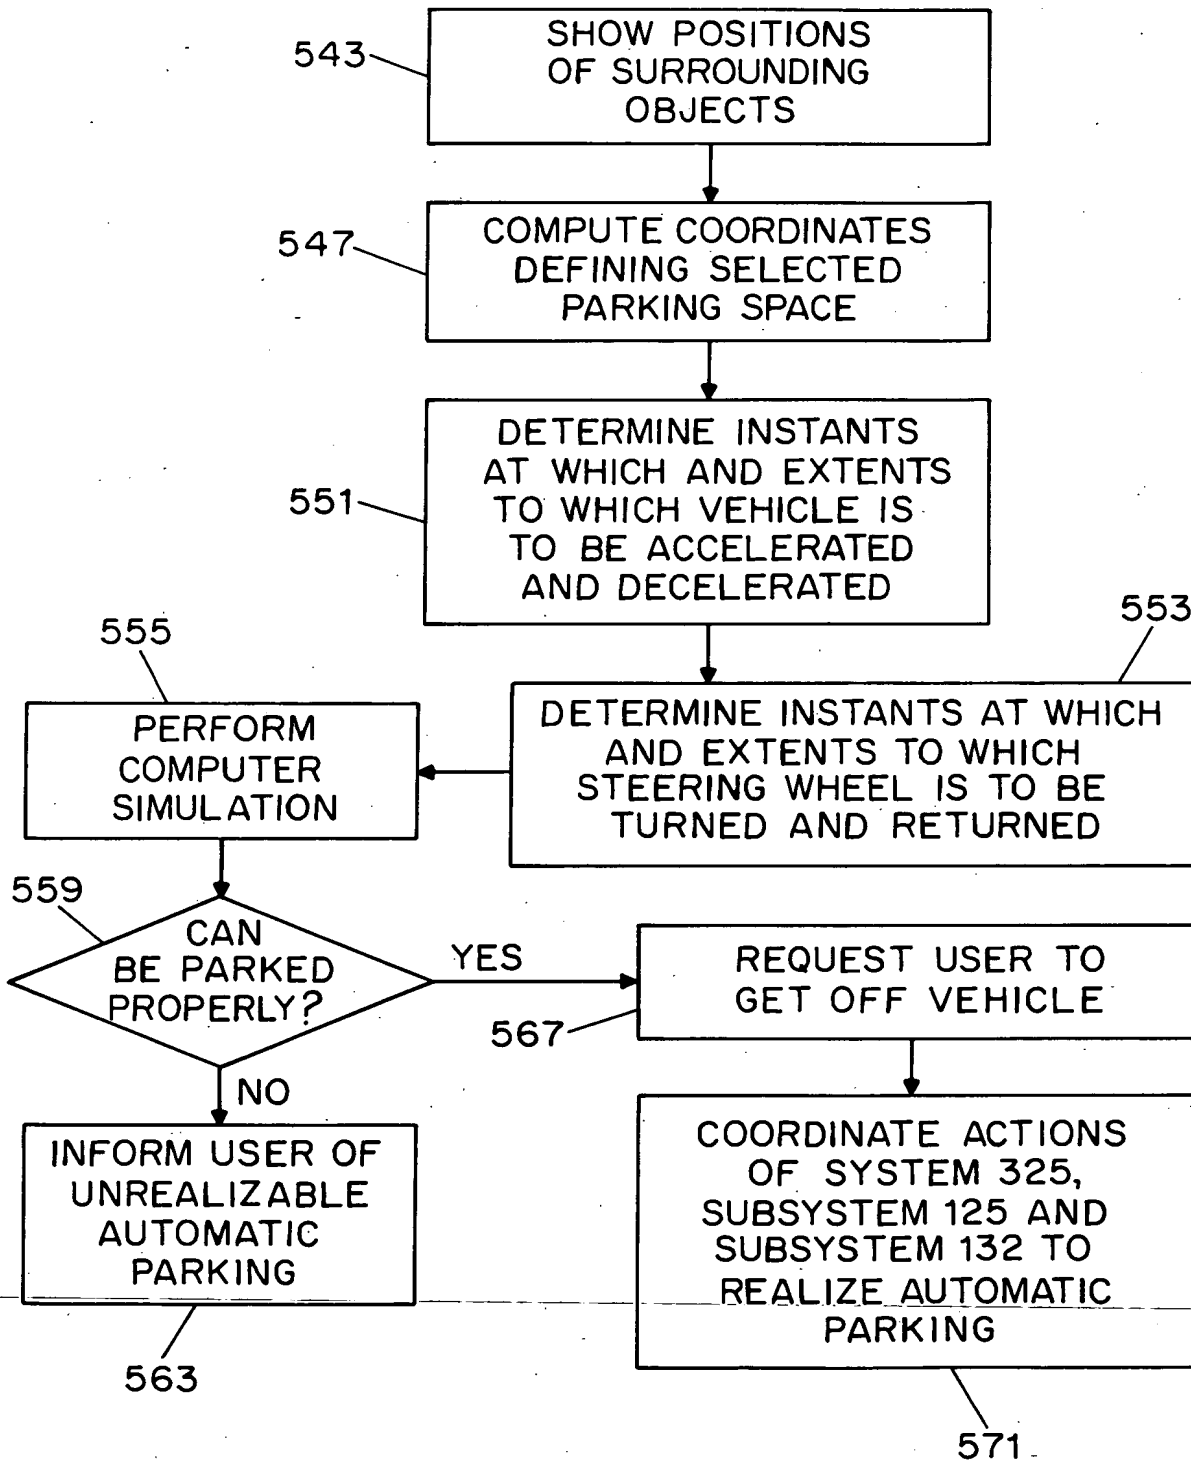


FIG. 9

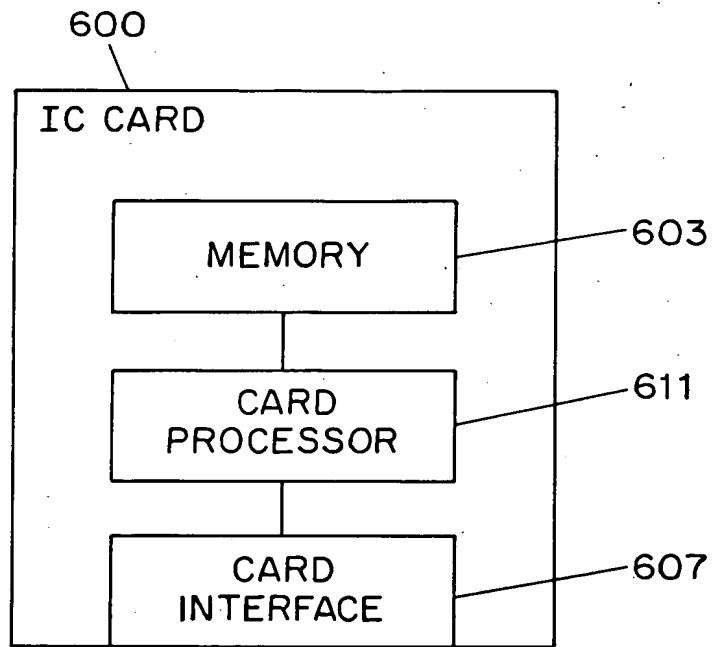


FIG. 10

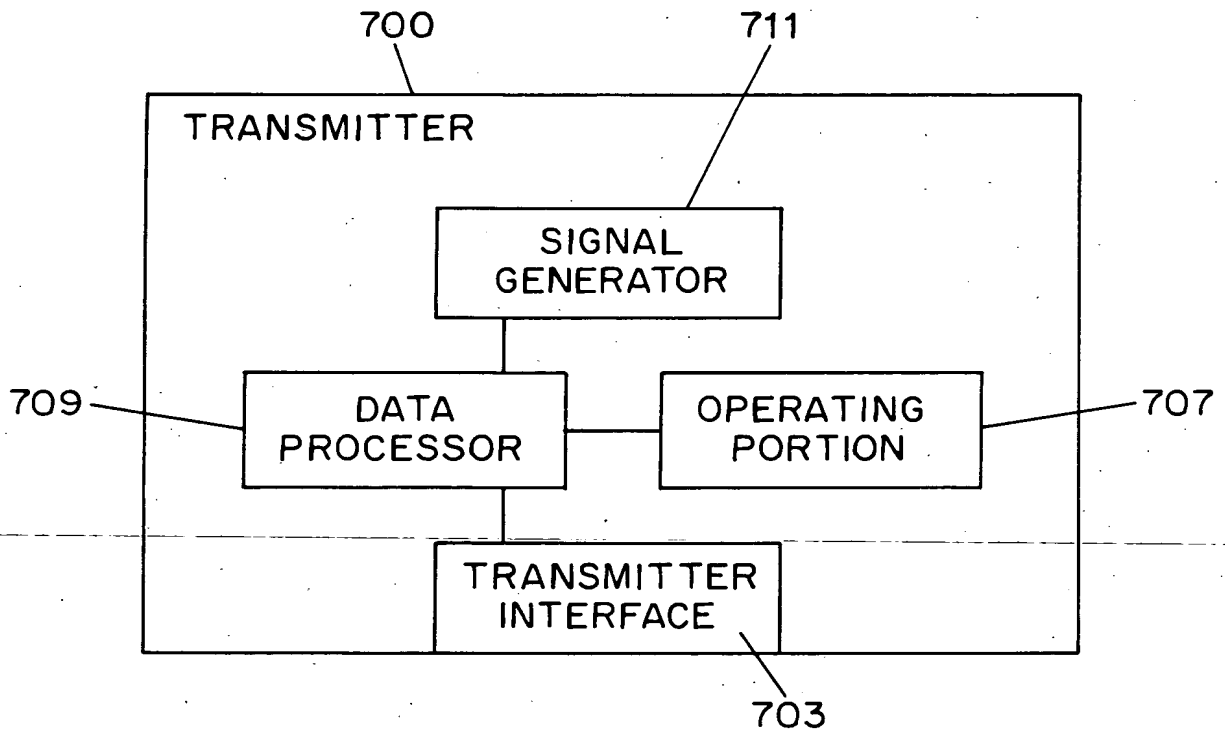


FIG. 11

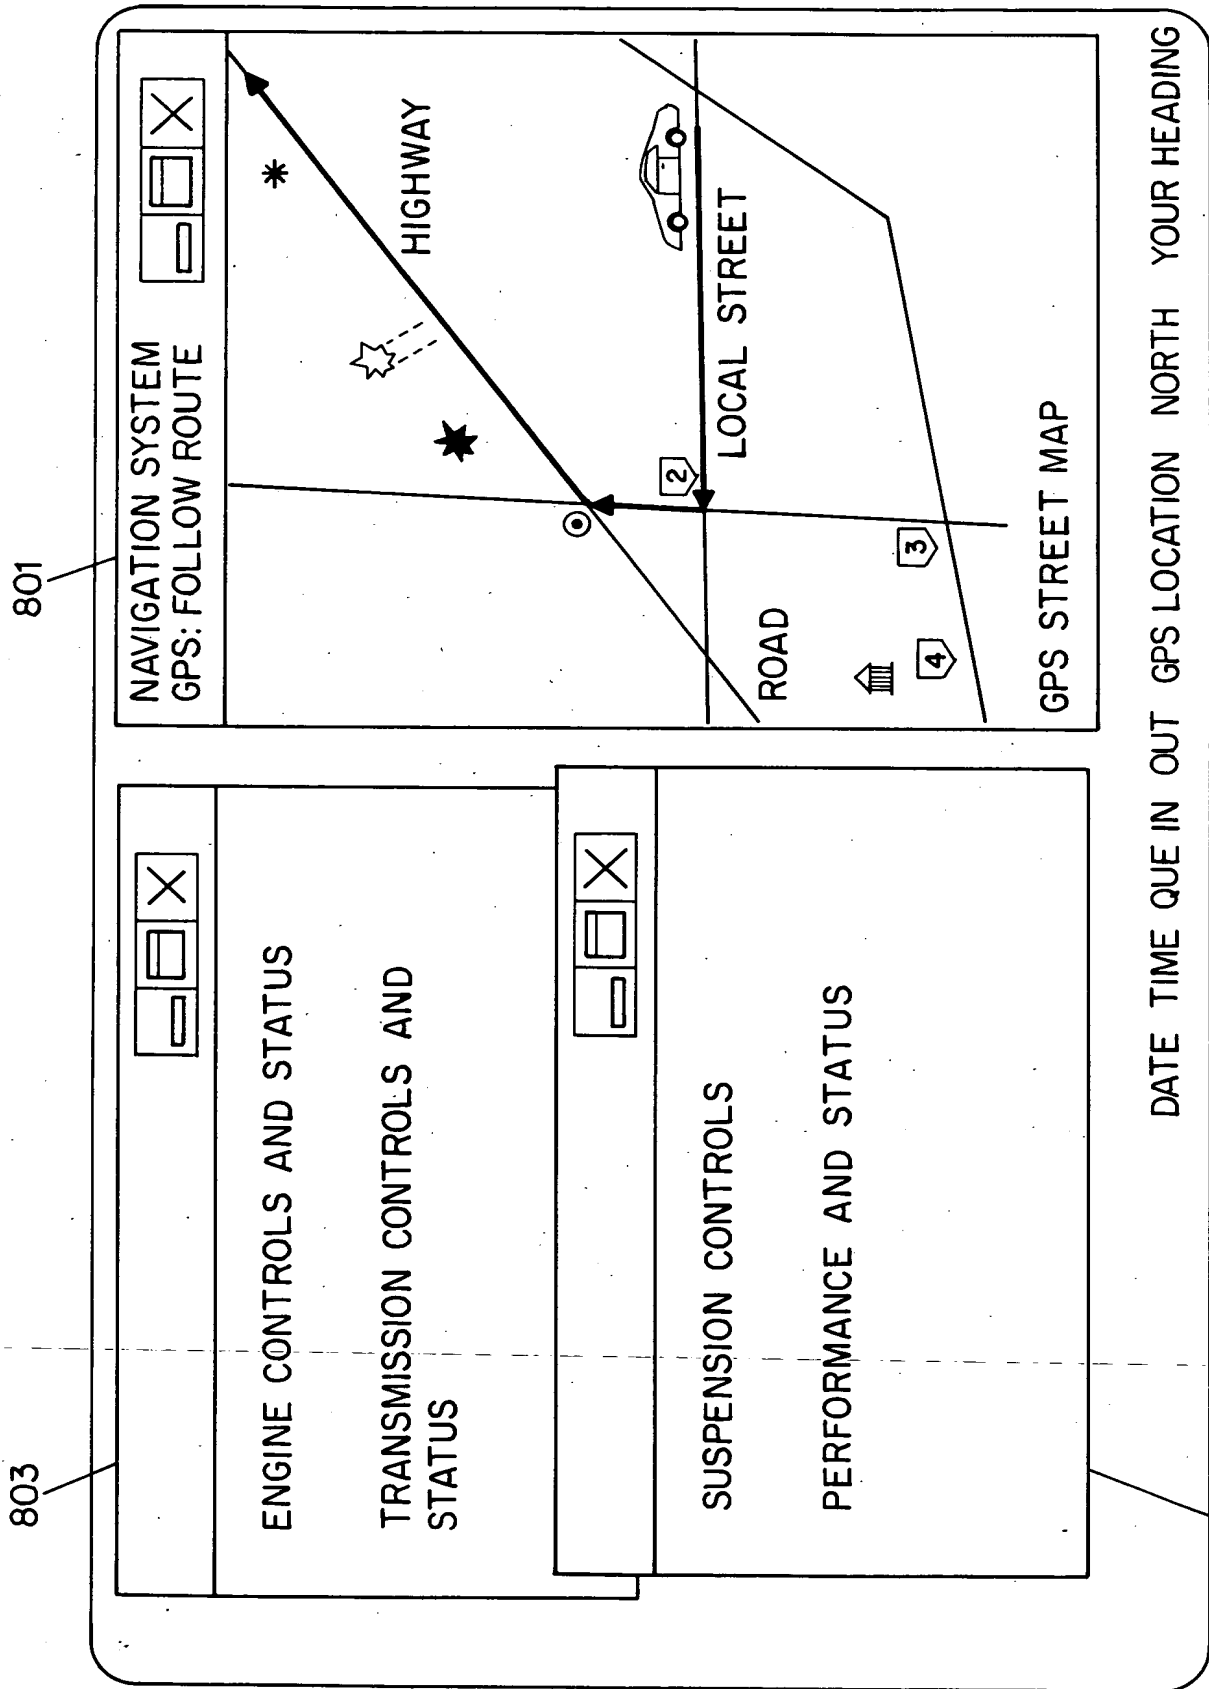


FIG. 12

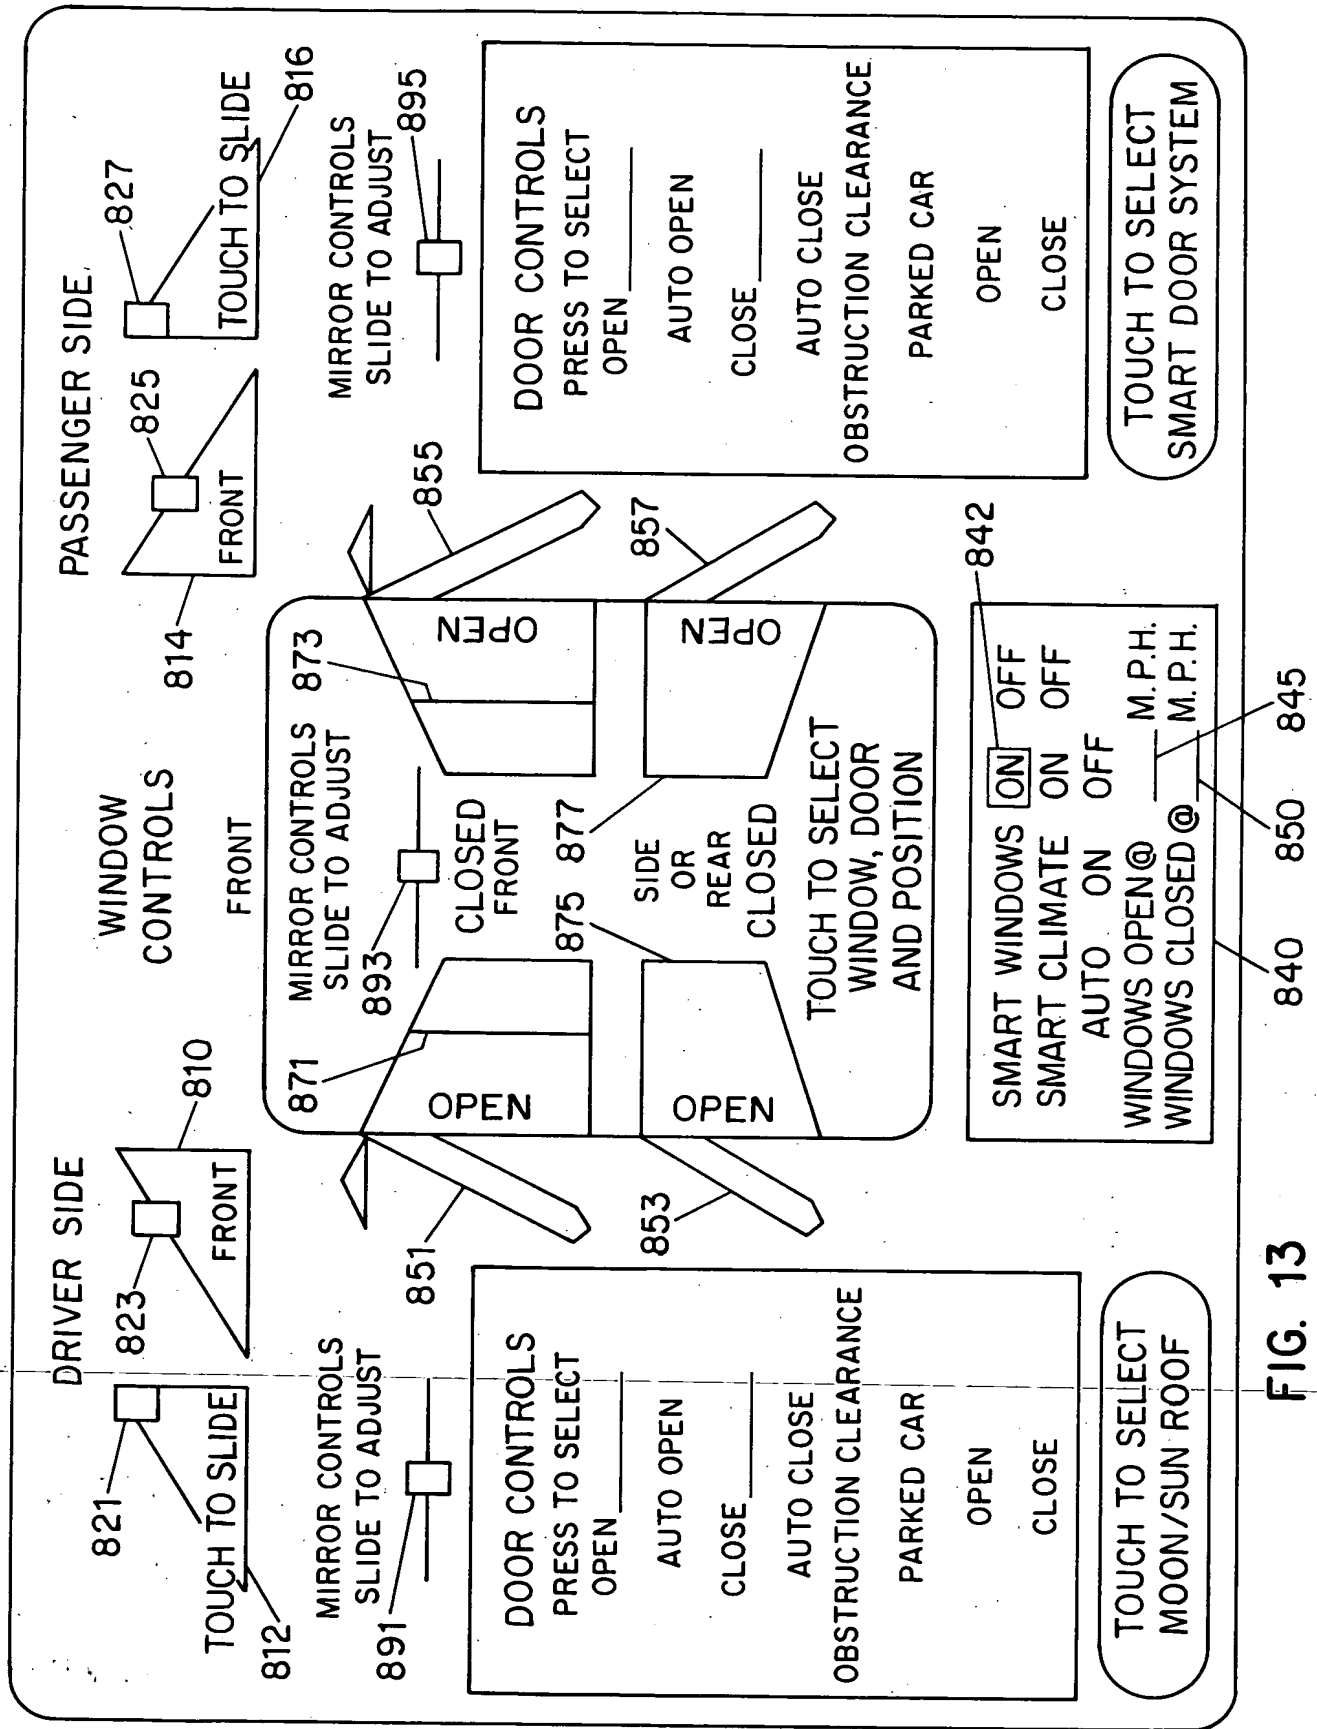


FIG. 13

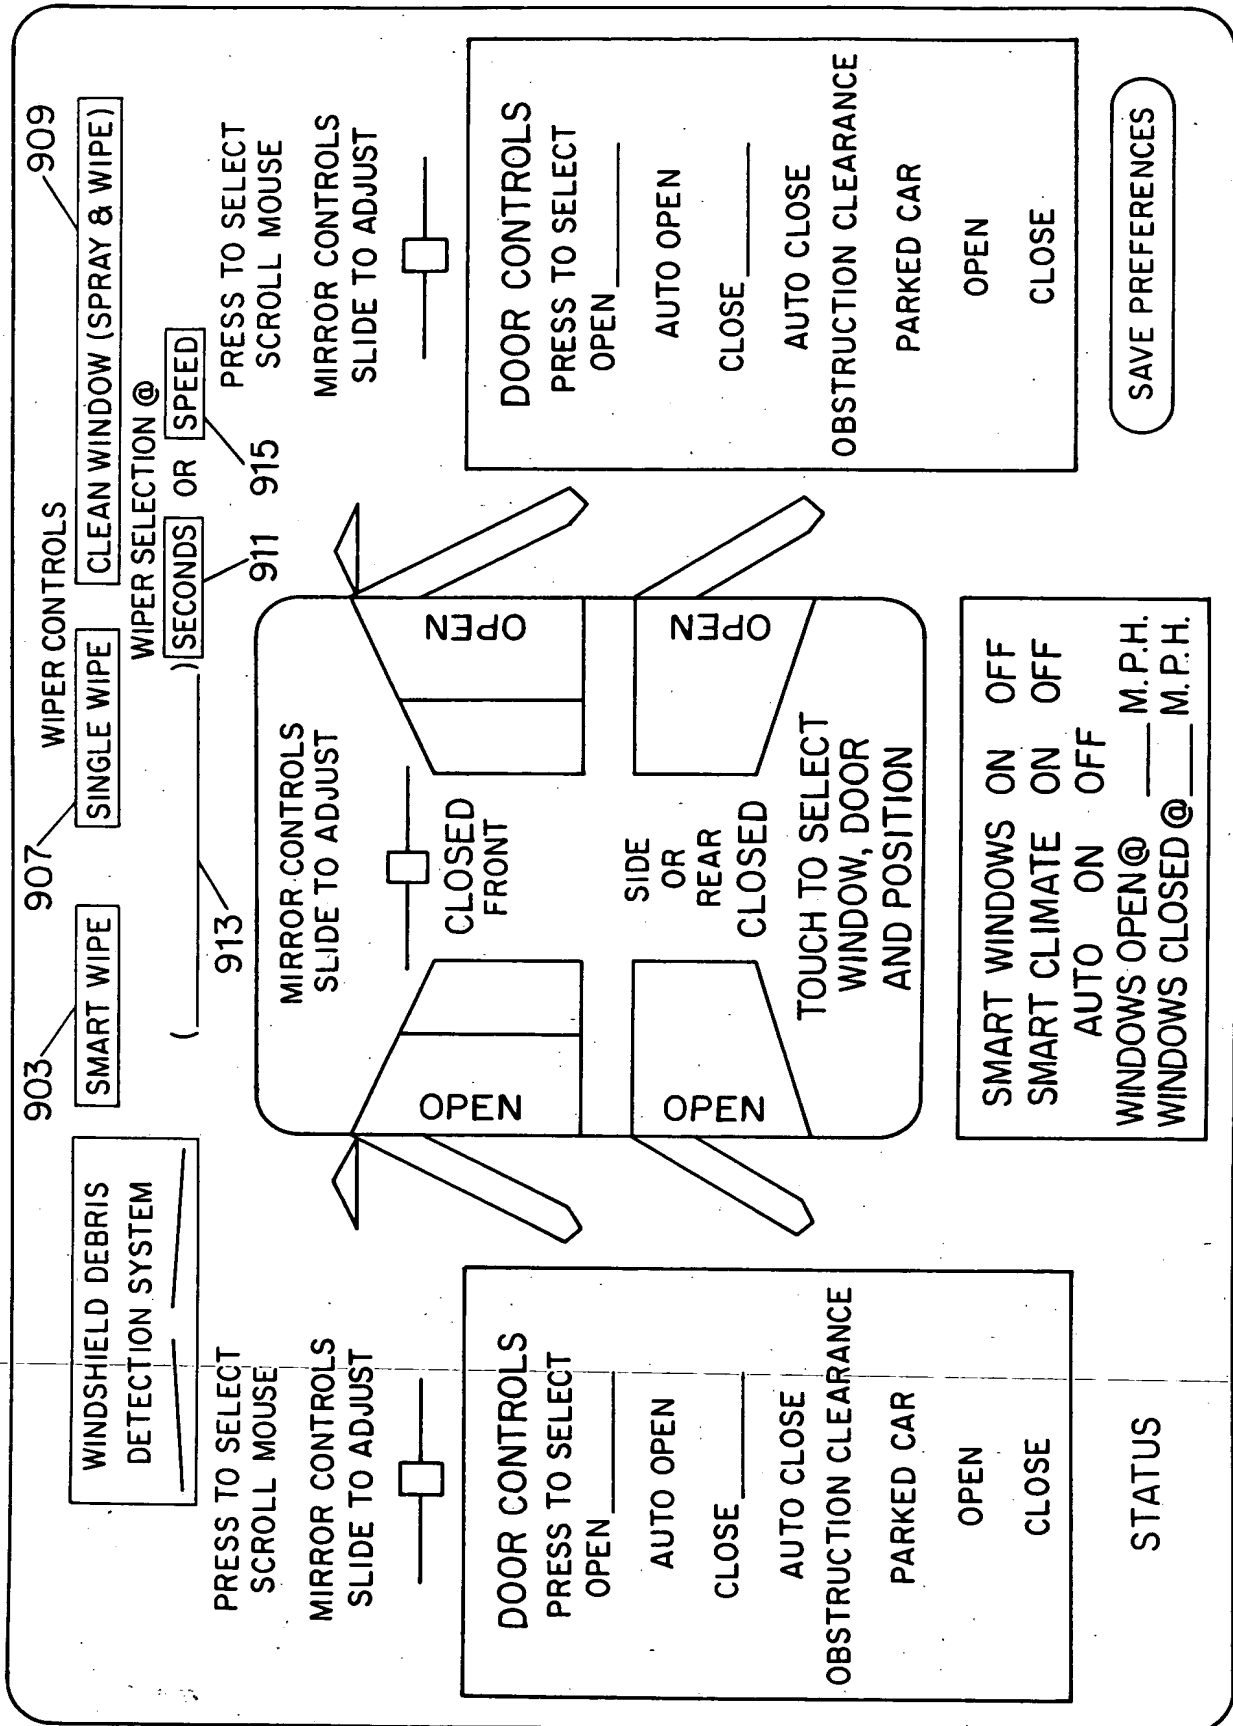


FIG. 14

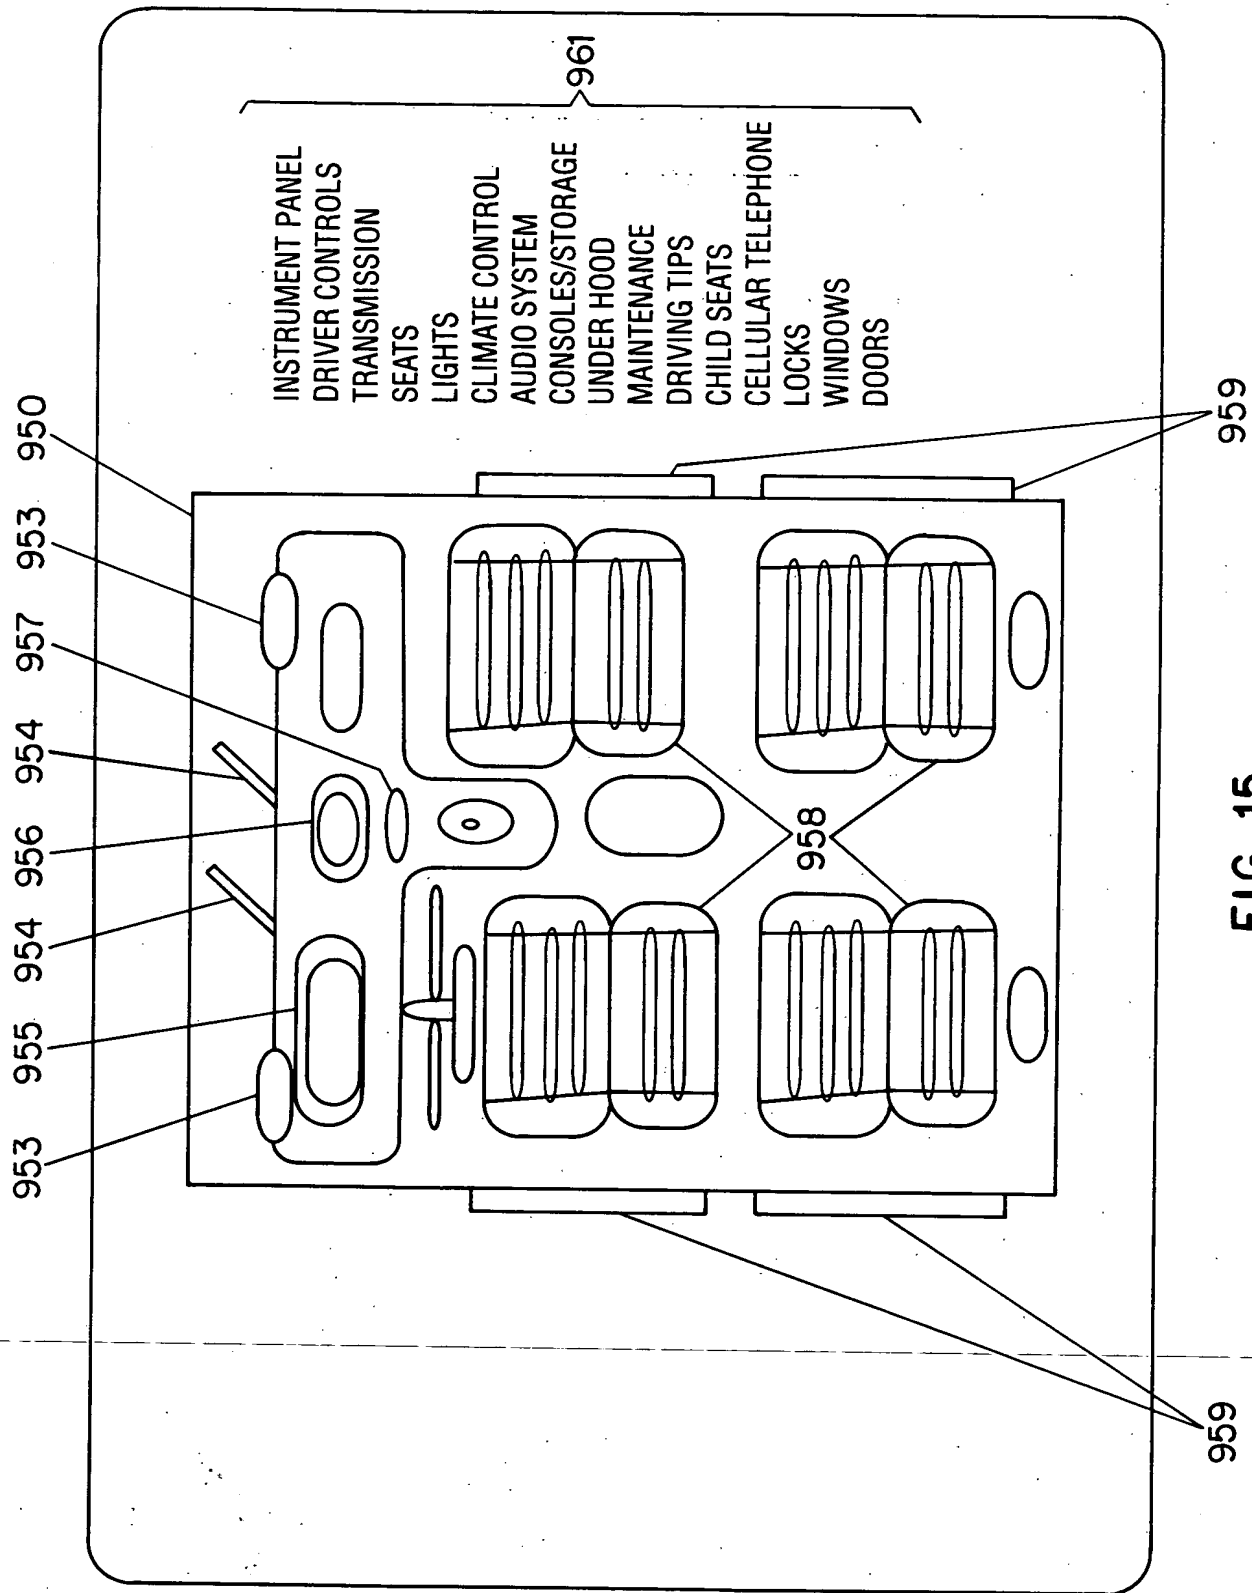
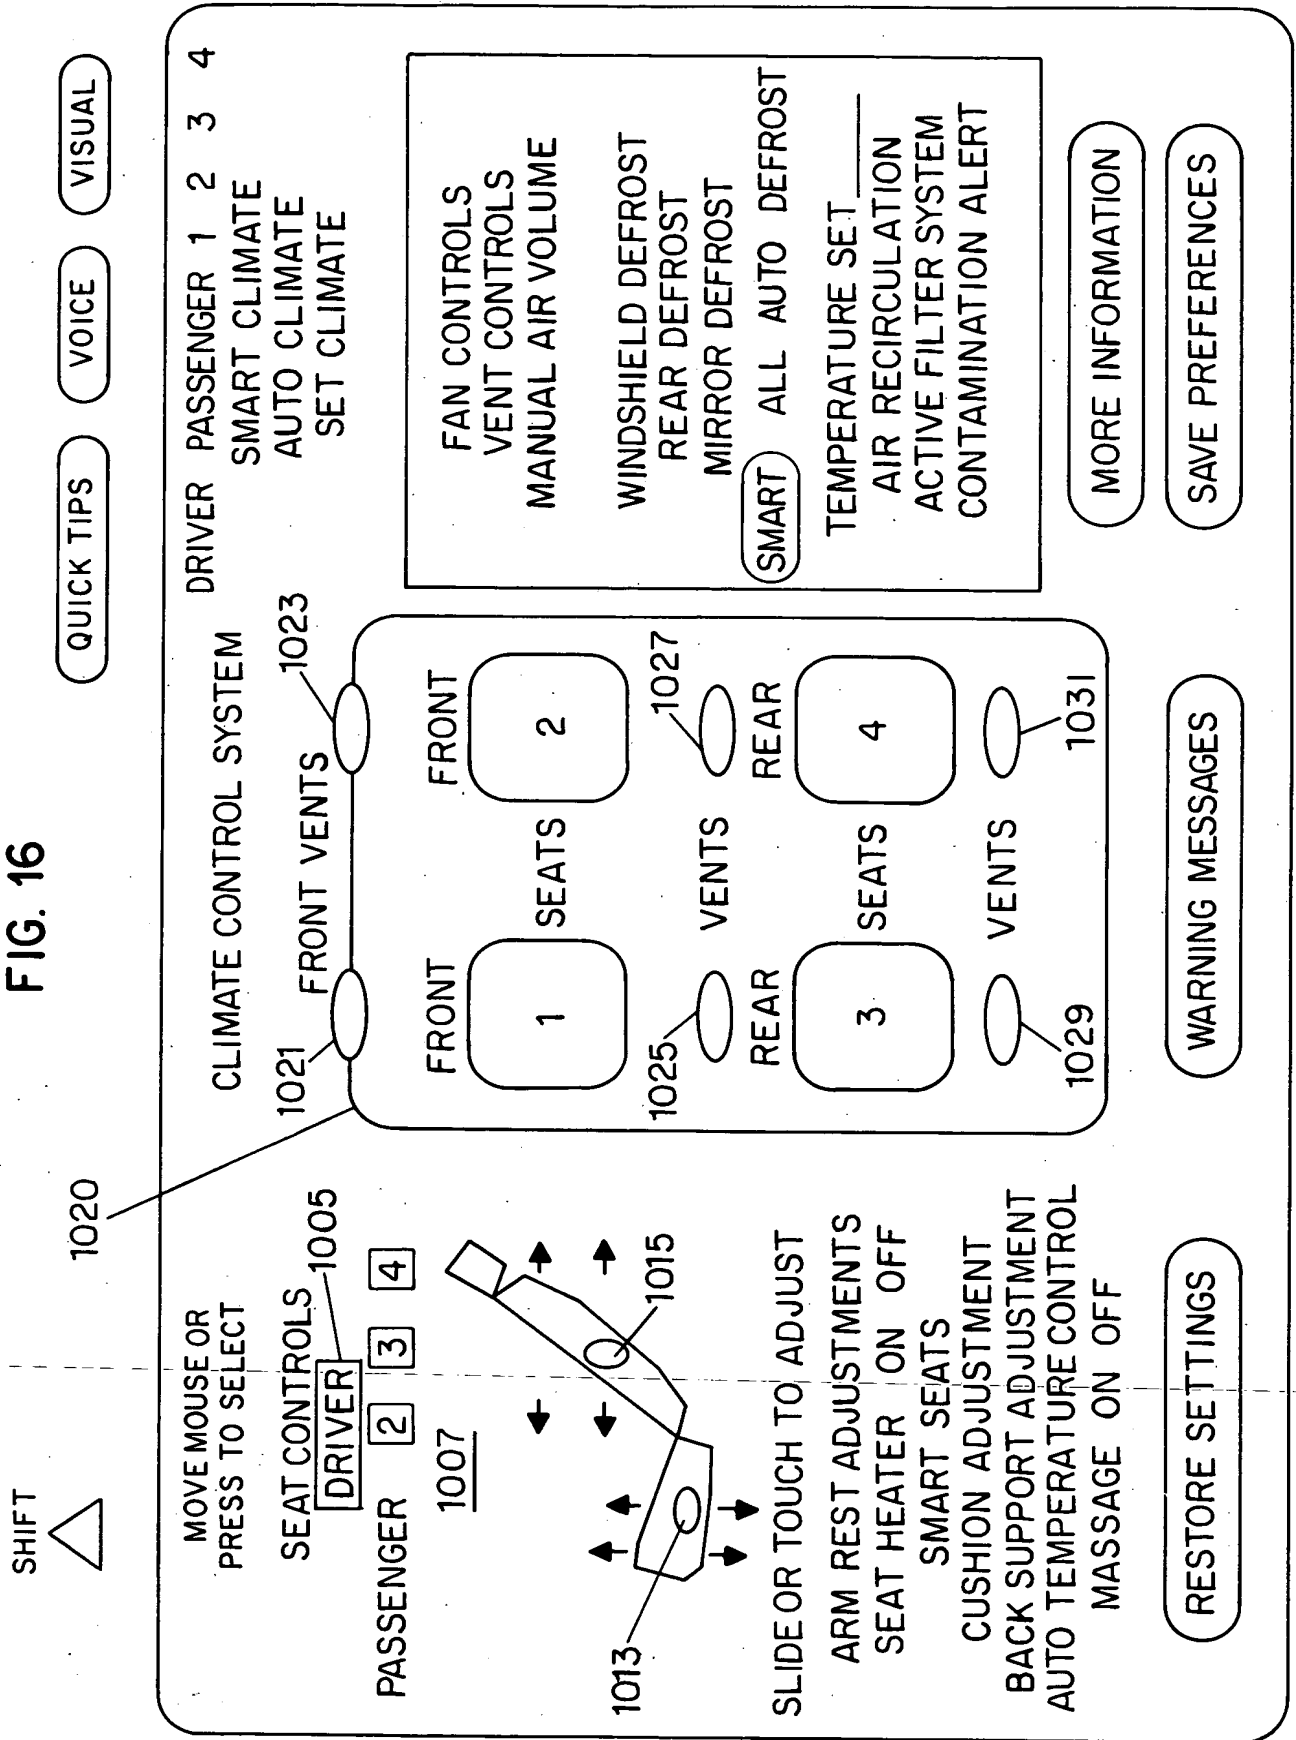


FIG. 16



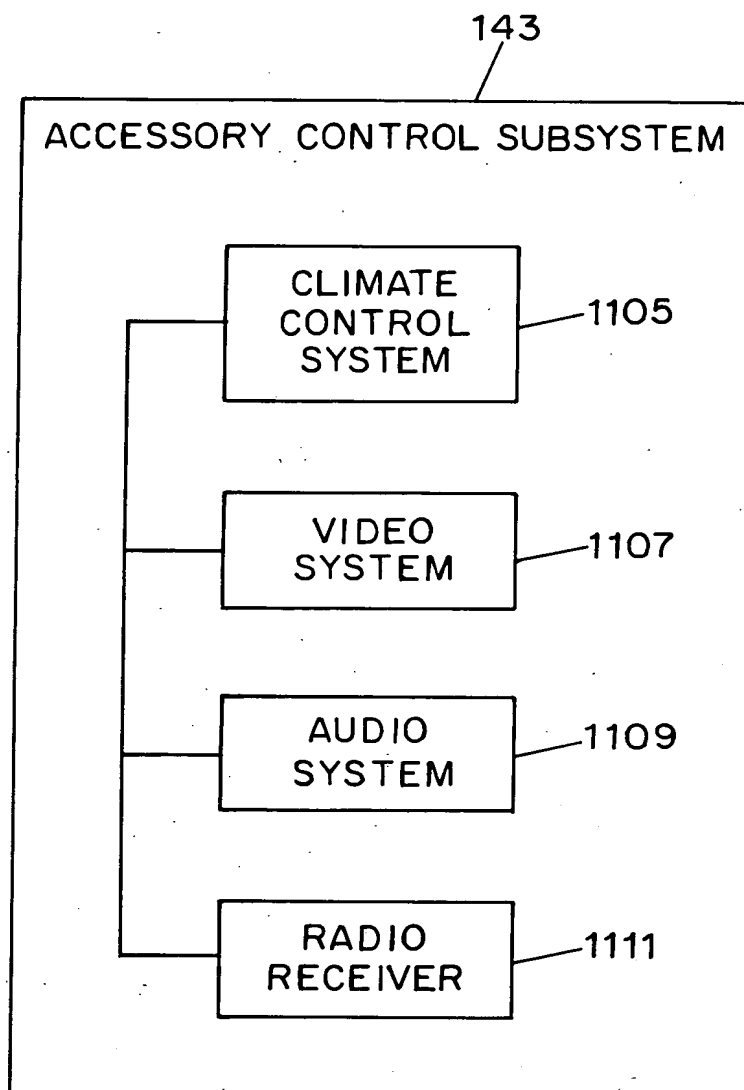


FIG. 17

SELECTIONS FROM
MENU OR SCREEN

QUICK TIP: PRESS
ANIMATION TO HEAR AND
SEE DEMO

ANIMATION

VOICE

FIG. 18

MORE INFORMATION

USER ICON

AUDIO SYSTEM RADIO CASSETTE CD VIDEO TV WEATHER BAND

RADIO STATIONS: XX LOS ANGELES, XX SANTA ANA STATIONS

X IRVINE

SAVE AREA SETTINGS YES NO

SELECTION BEING PLAYED:

XX SONG, XX ALBUM 1245

WEATHER BAND

OTHER

1247 1249

YOU ARE
LISTENING
TO:

1271

1273

10 COUNTRY: FM100.7

FM102.9 AM103.5

AM107.8

1275

8 TALK/NEWS: AM79.00

FM89.9 FM91.2 AM98.6 AM107.0

5 ROCK: FM89.3 FM98.1

AM990 FM102.7 FM107.90

2 CLASSIC: FM91.4 FM96.4

1277

SET FOR: DRIVER PASSENGER 1 2 3 4 5

ON OFF VOLUME CONTROL

FADER CONTROLS FRONT LEFT RIGHT

BACK LEFT RIGHT

1255

MOVE SPEAKERS FOR

DESIRED SOUND

EFFECTS

PRESS EFFECT THEN

SPEAKER

ROCK

SURROUND

MOVIE

ETC.

QUICK TIP: SCROLL FOR
XX MORE STATIONS
USE MOUSE CONTROLS
OR PRESS TO SELECT

QUICK TIP: ANTENNA
IS ACTIVATED BY
RADIO AND TELEPHONE,
BOTH MUST BE
SWITCHED OFF TO
LOWER ANTENNA

STEREO

DOLBY

DIGITAL
ENCODED

SMART AUDIO

AUTO RADIO

RESTORE SETTINGS

MORE INFORMATION

SAVE PREFERENCES

1207

1205